


040032-01 / 040032-03


Table Extension


4' and 8' extension

Proudly Made in USA

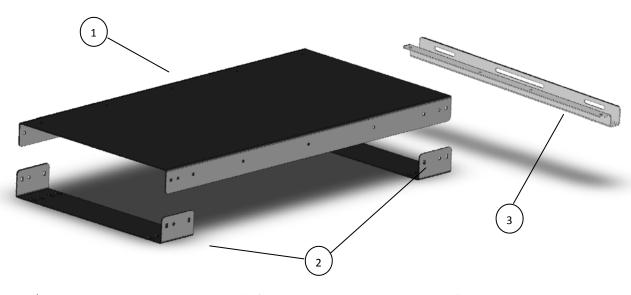

Index#	Part#	Description	Qty	
1		extension table	1	
	084190-01	4' x 24" Extension table only		
	084190-03	8' x 24" Extension table only		
	084190-05	4' X 12.75" Extension table only		
	084190-07	8' x 12.75" Extension table only		
2		Brace	2	
	084194-01	Brace for 24" wide table		
	084194-03	Brace for 12.75" wide table		
3		Mounting bracket (appearance will vary)	1	
	084156-04	Mounting bracket for CD series		
	084156-06	Mounting bracket for HD series		
Note hardware (nuts and bolts) not shown				
	096779-00	Carriage bolt, 5/16-18 x .75	10	
	099384-07	Nut, hex 5/16-18	10	
	099670-04	Lock washer 5/16	10	



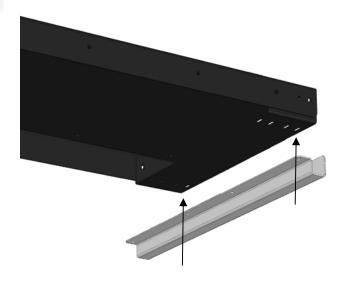

To attach the mounting bracket (after it has been bolted to the frame of the prospective machine) use the included $5/16-18 \times .75$ " carriage bolts (2), flat washers (2), and hex nuts (2) to attach the mounting bracket to the brace (index # 2) that has been attached to the extension table (note bracket appearance will vary by model of machine / machine stand to which it is being mounted.



	#	part#	description	qty
	1	084179-02	Leg	2
	2	084179-04	Foot, adjustable	2
	3		Brace, leg	2
		084179-06	Brace, leg (20.4" wide assy # 0400	29-00)
		084179-08	Brace, leg (10.9" wide assy # 0400	29-02)
Hardware parts not shown:				
		096779-00	Carriage bolt, 5/16-18 x x.75	16
		099384-07	Nut, hex 5/16-18	16
		099370-04	Lock washer 5/16	16

040029-00 / 040029-02 Adjustable Leg

Legs adjust from 31.9 to 28.2

Proudly Made in USA

Assembly instructions:

1. Attach the adjustable feet with the included carriage bolts. Pay attention to install the heads outside and the lock washer and hex nut in the inside of the formed channel. Mount the adjustable feed at the lowest point in the adjustability range and both feet at the same height; this will make the final adjustment easier.

After the adjustable feet have been bolted on attach the braces (index#3) paying special attention to line up the square holes in the leg with the square hole in the brace. Insert the included carriage bolt (8 pieces) with the head to the outside and the lock washer and hex nut on the inside of the formed channel of the leg.

3. Adjusting the leg to the proper height will require assistance from another person. To adjust the leg to the proper height loosen the hex nuts on the inside of the adjustable foot, then lift the leg assembly to the proper height and tighten. (Note the each bolt layout will only allow a few inches of adjustment) If the foot needs to be moved past its range of motion the bolts may need to be repositioned to the next slot up or down to achieve the proper height.

